

Video Intercom Villa Door Station

User Manual

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<u>https://www.hikvision.com</u>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

 TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.
- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
i Note	Provides additional information to emphasize or supplement important points of the main text.

Safety Instruction

Warning

- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please use the power adapter, which is provided by normal company. The power consumption cannot be less than the required value.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.
- When the product is installed on wall or ceiling, the device shall be firmly fixed.
- If smoke, odors or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).
- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- The device cover for indoor use shall be kept from rain and moisture.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- Please use the provided glove when open up the device cover, avoid direct contact with the device cover, because the acidic sweat of the fingers may erode the surface coating of the device cover.
- Please use a soft and dry cloth when clean inside and outside surfaces of the device cover, do not use alkaline detergents.
- Please keep all wrappers after unpack them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.

- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.
- Input voltage should meet both the SELV and the Limited Power Source according to 60950-1 standard.
- The power supply must conform to LPS. The recommended adaptor models and manufacturers are shown as below. Use the attached adapter, and do not change the adaptor randomly.

Model	Manufacturer	Standard
ADS-24S-12 1224GPCN	SHENZHEN HONOR ELECTRONIC CO.,LTD	CEE
G0549-240-050	SHENZHEN GOSPELL DIGITAL TECHNOLOGY CO.,LTD	CEE
TS-A018-120015Ec	SHENZHEN TRANSIN TECHNOLOGIES CO., LTD	CEE

Battery:

Do not ingest battery. Chemical burn hazard! This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION: Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Improper replacement of the battery with an incorrect type may defeat a safeguard (for example,in the case of some lithium battery types). Do not dispose of the battery into fire or a hot oven,or mechanically crush or cut the battery,which may result in an explosion. Do not leave the battery in an extremely high temperature surrounding environment,which may result in an explosion or the leakage of flammable liquid or gas. Do not subject the battery to extremely low air pressure,which may result in an explosion or the leakage of flammable liquid or gas.+ identifies the positive terminal(s) of equipment which is used with, or generates direct current.- identifies the negative terminal(s) of equipment which is used with, or generates direct current.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see:www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. this device may not cause interference, and
- 2. this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1. l'appareil ne doit pas produire de brouillage, et
- 2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Contents

Chapter 1 About this Manual 1
Chapter 2 Appearance 2
Chapter 3 Terminal and Wiring Description9
3.1 Terminal Description
3.2 Wiring Description 10
3.2.1 Door Lock Wiring 10
3.2.2 Door Contact Wiring 11
3.2.3 Exit Button Wiring 12
3.2.4 Alarm Input Device Wiring 13
Chapter 4 Installation 14
4.1 Accessory Introduction 14
4.2 Surface Mounting with Protective Shield15
4.3 Surface Mounting without Protective Shield 17
4.4 Flush Mounting with Protective Shield 19
4.5 Flush Mounting without Protective Shield 21
Chapter 5 Activation 24
5.1 Activate Device via Web 24
5.2 Activate Device via Client Software 24
5.3 Edit Network Parameters 25
Chapter 6 Remote Configuration via Web 26
6.1 Live View 26
6.2 User Management 26
6.3 Device Management 27
6.4 Parameters Settings 28
6.4.1 Local Parameters Settings 28
6.4.2 System Settings 30

6.4.3 Network Settings 3
6.4.4 Video & Audio Settings 3
6.4.5 Image Settings 4
6.4.6 Event Settings 4
6.4.7 Schedule Settings 4
6.4.8 Intercom Settings 4
6.4.9 Access Control Settings 5
Chapter 7 Configuration via Client Software 5
7.1 Device Management 5
7.1.1 Add Online Device
7.1.2 Add Device by IP Address 5
7.1.3 Add Device by IP Segment 5
7.2 Live View via Door Station 5
7.3 Organization Management 5
7.3.1 Add Organization 5
7.3.2 Modify and Delete Organization
7.3.2 Modify and Delete Organization 5 7.4 Person Management 5
7.4 Person Management
7.4 Person Management
7.4 Person Management 5 7.4.1 Add Person 5 7.4.2 Modify and Delete Person 6
7.4 Person Management 5 7.4.1 Add Person 5 7.4.2 Modify and Delete Person 6 7.4.3 Change Person to Other Organization 6
7.4 Person Management57.4.1 Add Person57.4.2 Modify and Delete Person67.4.3 Change Person to Other Organization67.4.4 Import and Export Person Information6
7.4 Person Management57.4.1 Add Person57.4.2 Modify and Delete Person67.4.3 Change Person to Other Organization67.4.4 Import and Export Person Information67.4.5 Get Person Information from Device6
7.4 Person Management 5 7.4.1 Add Person 5 7.4.2 Modify and Delete Person 6 7.4.3 Change Person to Other Organization 6 7.4.4 Import and Export Person Information 6 7.4.5 Get Person Information from Device 6 7.4.6 Issue Card in Batch 6
7.4 Person Management57.4.1 Add Person57.4.2 Modify and Delete Person67.4.3 Change Person to Other Organization67.4.4 Import and Export Person Information67.4.5 Get Person Information from Device67.4.6 Issue Card in Batch67.5 Video Intercom Settings6
7.4 Person Management57.4.1 Add Person57.4.2 Modify and Delete Person67.4.3 Change Person to Other Organization67.4.4 Import and Export Person Information67.4.5 Get Person Information from Device67.4.6 Issue Card in Batch67.5 Video Intercom Settings67.5.1 Receive Call from Door Station6

Appendix A. Communication Matrix and Device Command

Chapter 1 About this Manual

Get the manual and related software from or the official website (http://www.hikvision.com).

Product	Model	Wireless Description	
Villa Door Station	DS-KV8113-WME1(C)	2.4 G Wi-Fi + 13.56 MHz	
	DS-KV8213-WME1(C)	2.4 G Wi-Fi + 13.56 MHz	
	DS-KV8413-WME1(C)	2.4 G Wi-Fi + 13.56 MHz	
	DS-KV8113-WME1(C)/Flush	2.4 G Wi-Fi + 13.56 MHz	
	DS-KV8213-WME1(C)/Flush	2.4 G Wi-Fi + 13.56 MHz	
	DS-KV8413-WME1(C)/Flush	2.4 G Wi-Fi + 13.56 MHz	

Chapter 2 Appearance

Single-Button Villa Door Station

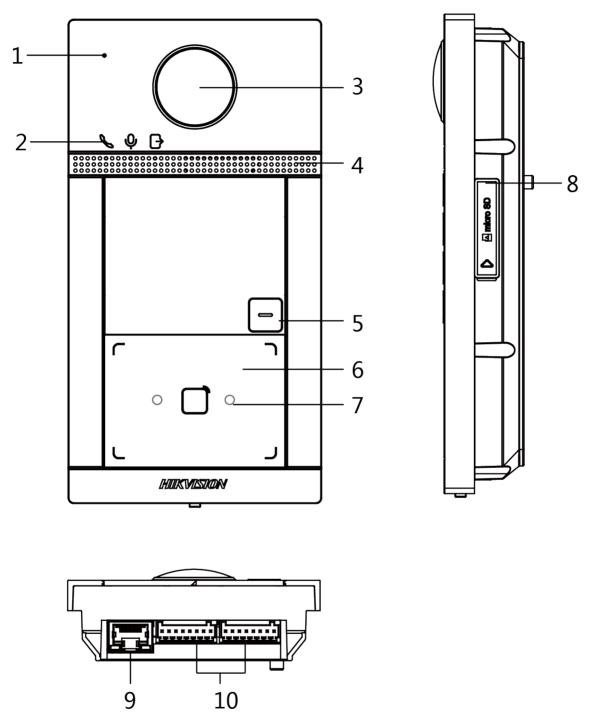


Figure 2-1 Single-Button Villa Door Station Appearance

No.	Description
1	Microphone
2	Indicator Unlock (Green)/ Call (Orange)/ Communicate (White)
3	Camera
4	Loudspeaker
5	Button
6	Card Reading Area
7	IR Light
8	TF Card Slot (Reserved) & Debugging Port
9	LAN
10	Terminals

Table 2-1 Description

Two-Button Villa Door Station

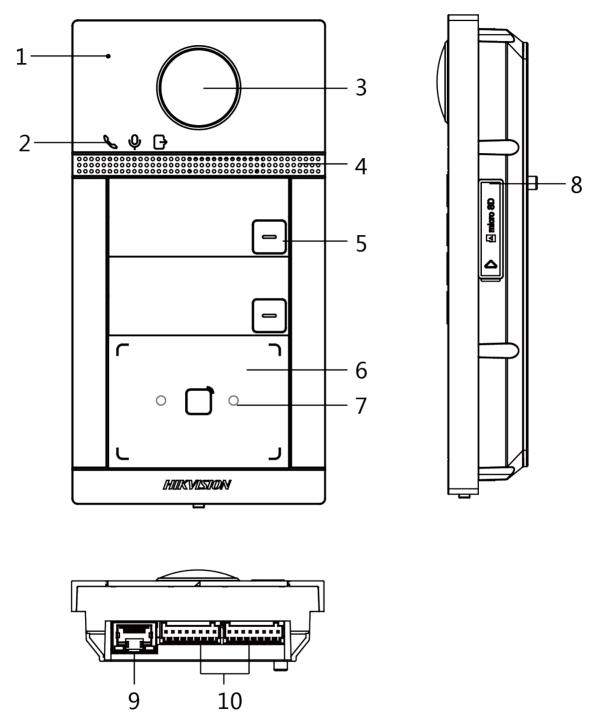


Figure 2-2 Two-Button Villa Door Station Appearance

No.	Description
1	Microphone
2	Indicator Unlock (Green)/ Call (Orange)/ Communicate (White)
3	Camera
4	Loudspeaker
5	Button
6	Card Reading Area
7	IR Light
8	TF Card Slot (Reserved) & Debugging Port
9	LAN
10	Terminals

Table 2-2 Description

Four-Button Villa Door Station

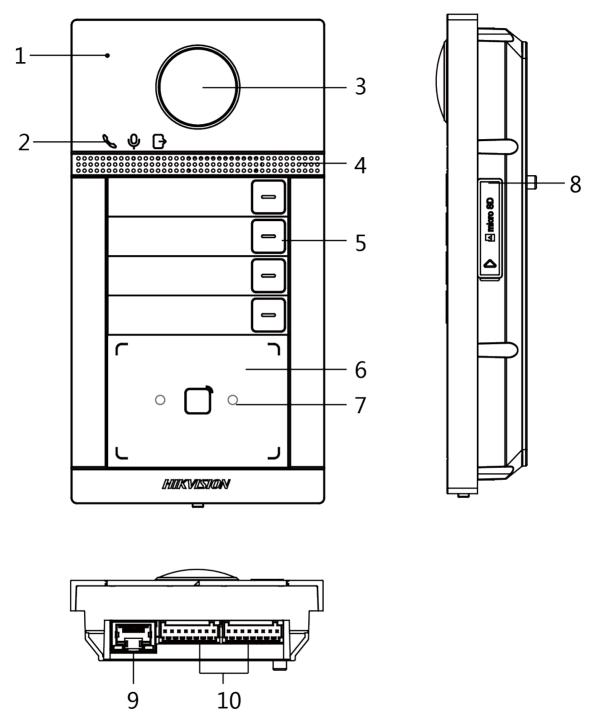


Figure 2-3 Four-Button Villa Door Station Appearance

No.	Description
1	Microphone
2	Indicator Unlock (Green)/ Call (Orange)/ Communicate (White)
3	Camera
4	Loudspeaker
5	Button
6	Card Reading Area
7	IR Light
8	TF Card Slot (Reserved) & Debugging Port
9	LAN
10	Terminals

Table 2-3 Description

Chapter 3 Terminal and Wiring Description

3.1 Terminal Description

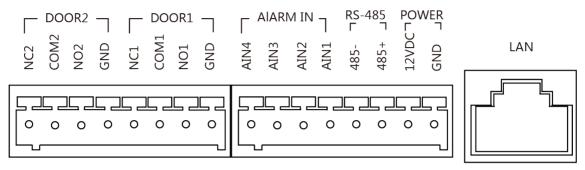


Figure 3-1 Terminal Description


Name	Interface	Description
DOOR	NC2	Door Lock Relay Output 2 (NC)
	COM2	Common Interface
	NO2	Door Lock Relay Output 2 (NO)
	GND	Grounding
	NC1	Door Lock Relay Output 1 (NO)
	COM1	Common Interface
	NO1	Door Lock Relay Output 1 (NO)
	GND	Grounding
ALARM IN	AI1	Alarm Input 1 (For the access of Door Contact)
	AI2	Alarm Input 2 (For the access of Door Contact)
		i Note
		Before accessing to the Door Contact, select
		Input as Door Status in I/O Settings page first.
	AI3	Alarm Input 3 (For the access of Exit Button)
	AI4	Alarm Input 4 (For the access of Exit Button)

Table 3-1 Description of Terminal and Interfaces

Name	Interface	Description
		i Note Before accessing to the Exit Button, select Input as Exit Button in I/O Settings page first.
RS-485	485+	RS-485 Communication Interface
Power Input	485- 12 VDC	12 VDC Input
Network	GND LAN	Network Interface

3.2 Wiring Description

3.2.1 Door Lock Wiring

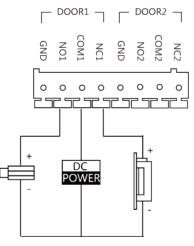




iNote

- Terminal NC1/COM1 is set as default for accessing magnetic lock/electric bolt; terminal NO1/ COM1 is set as default for accessing electric strike.
- To connect electric lock in terminal NO2/COM2/NC2, it is required to set the output of terminal NO2/COM2/NC2 to be electric lock with iVMS-4200 client software.

3.2.2 Door Contact Wiring

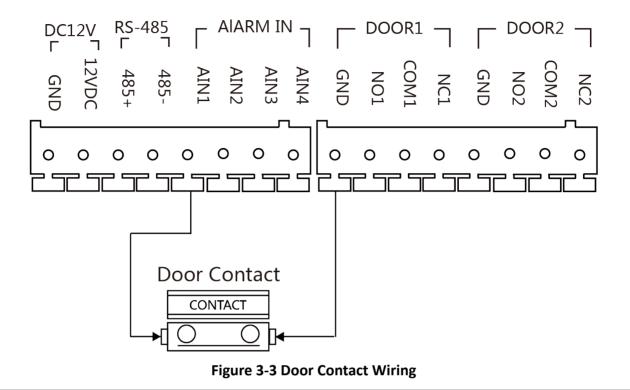

iNote

If the door contact is not used, the corresponding input interface needs to be grounded. Otherwise the door light will stay open.

3.2.3 Exit Button Wiring

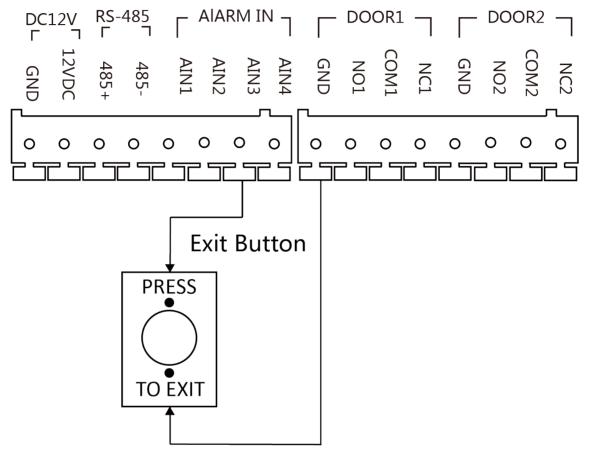


Figure 3-4 Exit Button Wiring

3.2.4 Alarm Input Device Wiring

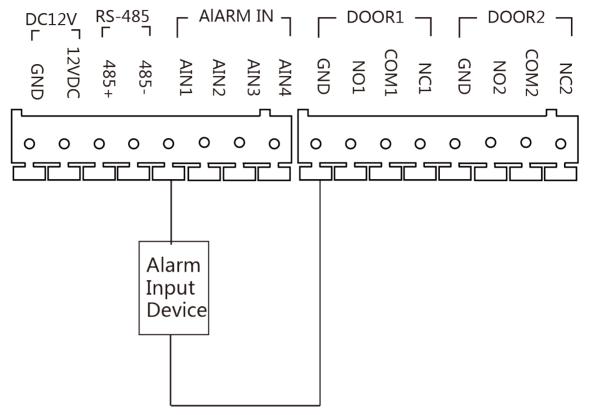


Figure 3-5 Alarm Input Device Wiring

Chapter 4 Installation

iNote

- Make sure the device in the package is in good condition and all the assembly parts are included.
- Make sure your power supply matches your door station.
- Make sure all the related equipment is power-off during the installation.
- Check the product specification for the installation environment.

4.1 Accessory Introduction

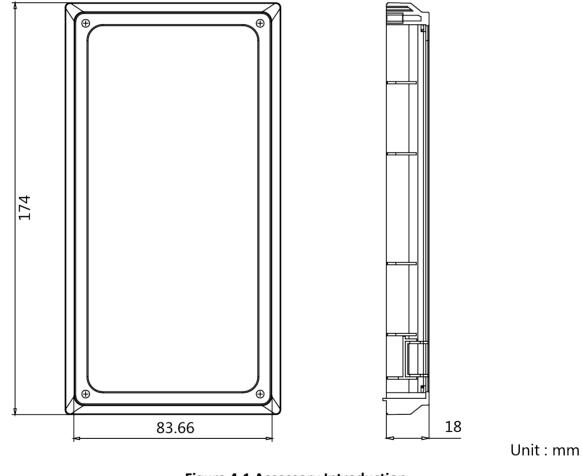


Figure 4-1 Accessory Introduction

iNote

The dimension of gang box for door station is: 174 (length) × 83.66 (width) × 18 (depth) mm.

4.2 Surface Mounting with Protective Shield

Before You Start

- Tools that you need to prepare for installation: Drill (ø2.846) and gradienter.
- Purchase the protective shield before installation.

Steps

1. Stick the mounting template on the wall. Drill screw holes according to the mounting template. Remove the template from the wall.

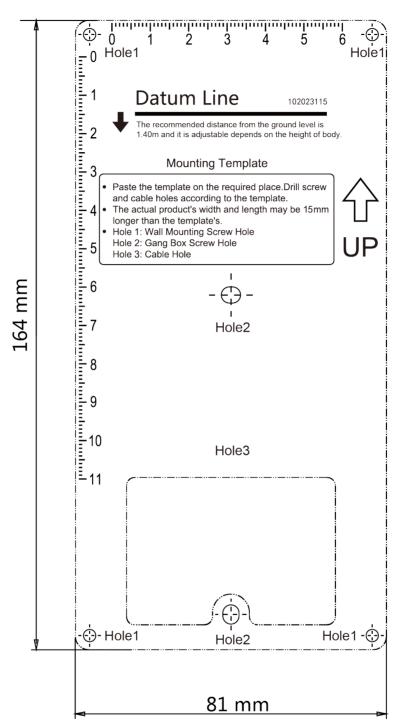


Figure 4-2 Mounting Template

- **2.** Align the protective shield with mounting template.
- **3.** Secure the mounting plate on the wall with 4 supplied screws according to the screw holes.
- 4. Secure the device on the mounting plate with 4 supplied set screws.
- 5. Fix the cover onto the device with the screw.

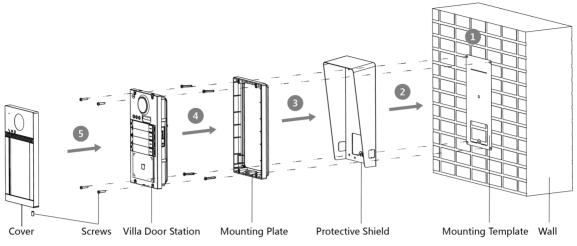


Figure 4-3 Surface Mounting with Protective Shield

4.3 Surface Mounting without Protective Shield

Before You Start

Tools that you need to prepare for installation: Drill (ø2.846) and gradienter.

Steps

1. Stick the mounting template on the wall. Drill screw holes according to the mounting template. Remove the template from the wall.

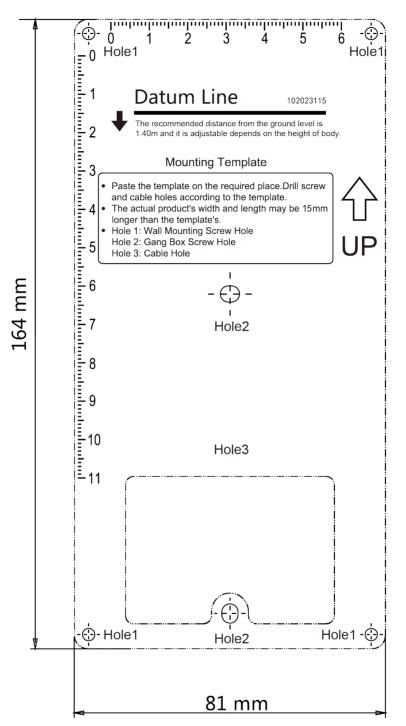


Figure 4-4 Mounting Template

- 2. Secure the mounting plate on the wall with 4 supplied screws according to the screw holes.
- **3.** Secure the device on the mounting plate with 4 supplied set screws.
- 4. Fix the cover onto the device with the screw.

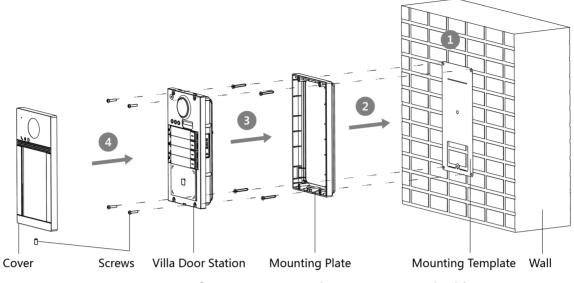


Figure 4-5 Surface Mounting without Protective Shield

4.4 Flush Mounting with Protective Shield

Before You Start

- Tools that you need to prepare for installation: Drill (ø2.846) and gradienter.
- Purchase the protective shield before installation.

Steps

1. Stick the mounting template on the wall. Drill the hole according to the mounting template. Remove the template from the wall.

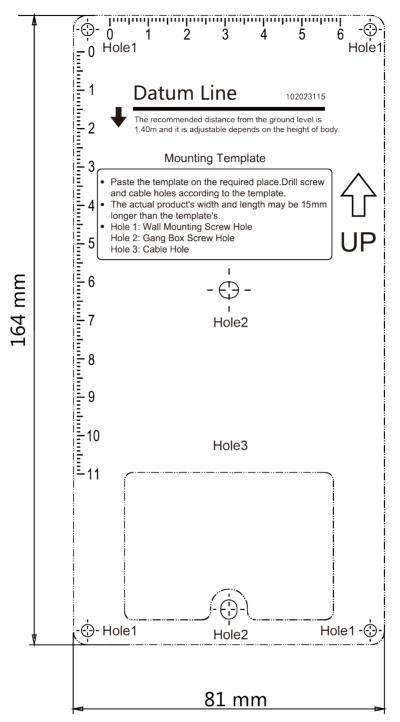


Figure 4-6 Mounting Template

iNote

The suggested size of hole is 175 mm × 84 mm × 19 mm.

2. Install the gang box into the hole with 4 screws.

- **3.** Align the protective shield with the gang box.
- **4.** Insert the device to the gang box. Secure the device with 4 supplied screws.
- 5. Fix the cover onto the device with the screw.

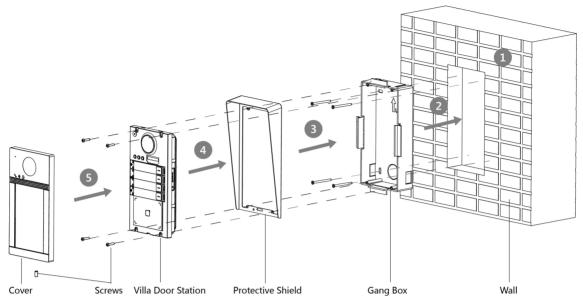


Figure 4-7 Flush Mounting with Protective Shield

4.5 Flush Mounting without Protective Shield

Before You Start

Tools that you need to prepare for installation: Drill (ø2.846) and gradienter.

Steps

1. Stick the mounting template on the wall. Drill the hole according to the mounting template. Remove the template from the wall.

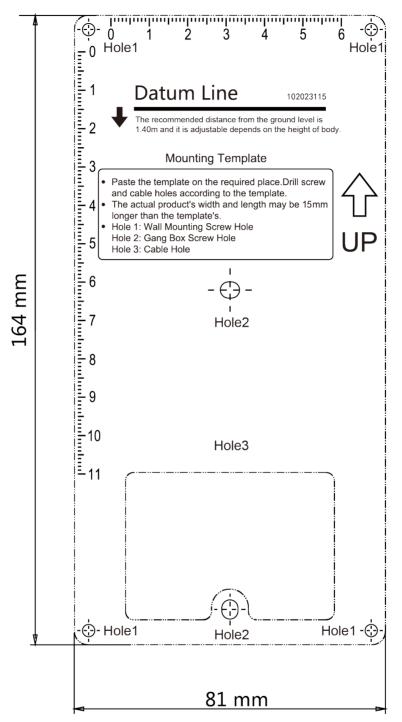


Figure 4-8 Mounting Template

iNote

The suggested size of hole is 175 mm × 84 mm × 19 mm.

2. Secure the gang box into the hole with 4 screws.

- **3.** Insert the device to the gang box. Secure the device with 4 supplied screws.
- **4.** Fix the cover onto the device with the screw.

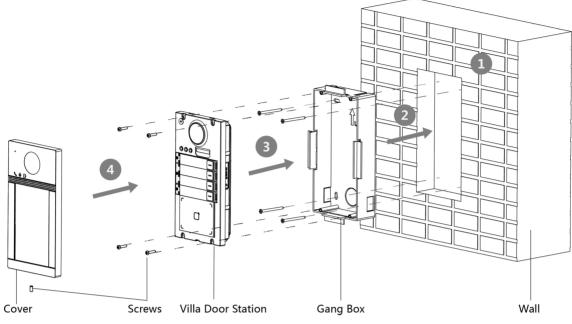


Figure 4-9 Flush Mounting without Protective Shield

Chapter 5 Activation

5.1 Activate Device via Web

You are required to activate the device first by setting a strong password for it before you can use the device.

Default parameters of the door station are as follows:

- Default IP Address: 192.0.0.65.
- Default Port No.: 8000.
- Default User Name: admin

Steps

- **1.** Power on the device, and connect the device to the network.
- 2. Enter the IP address into the address bar of the web browser, and click Enter to enter the activation page.

i Note

The computer and the device should belong to the same subnet.

- **3.** Create and enter a password into the password field.
- 4. Confirm the password.
- 5. Click OK to activate the device.

5.2 Activate Device via Client Software

You can only configure and operate the door station after creating a password for the device activation.

Default parameters of door station are as follows:

- Default IP Address: 192.0.0.65.
- Default Port No.: 8000.
- Default User Name: admin.

Steps

- 1. Run the client software, click Maintenance and Management → Device Management → Device to enter the page.
- 2. Click Online Device.
- 3. Select an inactivated device and click Activate.
- 4. Create a password, and confirm the password.

iNote

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

5. Click OK to activate the device.

i Note

- When the device is not activated, the basic operation and remote operation of device cannot be performed.
- You can hold the **Ctrl** or **Shift** key to select multiple devices in the online devices, and click the **Activate** button to activate devices in batch.

5.3 Edit Network Parameters

To operate and configure the device via LAN (Local Area Network), you need connect the device in the same subnet with your PC. You can edit network parameters via **iVMS-4200** client software.

Steps

- 1. Select an online activated device and click the Modify Netinfo.
- 2. Edit the device IP address and gateway address to the same subnet with your computer.
- 3. Enter the password and click OK to save the network parameters modification.

iNote

- The default port No. is 8000.
- The default IP address of the door station is 192.0.0.65.
- After editing the network parameters of device, you should add the devices to the device list again.

Chapter 6 Remote Configuration via Web

6.1 Live View

In the browser address bar, enter the IP address of the device, and press the Enter key to enter the login page.

Enter the user name and password and click **Login** to enter the Live View page. Or you can click **Live View** to enter the page.



Figure 6-1 Live View

- You can start/stop live view, capture, record, audio on/off, two-way audio, etc.
- The stream type can be set as main stream or sub stream.
- For IE (Internet Explorer) or Google users, the device support two-way audio communication.

iNote

Live View function may vary with different models. Please refer to the actual product.

6.2 User Management

You can add, delete or search the information of the user.

Click User to enter the settings page.

🕂 Add 🍈 Delete							h	nput Keywords	Q
Person ID	User Type	Name	Floor No.	Room No.	Card Number.	Start Time	End Time	Operation	

Figure 6-2 User Management

- Click Add to add users. Enter the Employee ID, Name, Floor No. and Room No., Set the Start Time and End Time. You can set the user as Administrator.
- Click Add Card. Manually enter the card No. or click Read and put your card on the card reading area for the device to identify the card No. automatically. Select card Property. Click OK to save the card information.
- Check the box of the user and click **Delete** in to delete the selected user.
- Enter the keyword and click search icon. The information will display in the list.

i Note

User management function may vary with different models. Please refer to the actual product.

6.3 Device Management

You can manage the linked device on the page.

Click Device Management to enter the settings page.



Figure 6-3 Device Management

Add Device

- Click Add to add the indoor station or sub door station. Enter the parameters and click OK to add.
- Click Import. Enter the information of the device in the template to import devices in batch.

Export

Click **Export** to export the information to the PC.

Delete

Select the device and click **Delete** to remove the selected device from the list.

Synchronize

Click Synchronize and enable Synchronize for device synchronization.

iNote

When enabling the function, the activated devices will synchronize parameters. Inactivated devices synchronize parameters whether the function is enabled or not.

Refresh

Click **Refresh** to get the device information.

Optional: Set Device Information.

- Click
 to delete device information from the list.
- Select Status and Device Type to search devices.

6.4 Parameters Settings

Click **Configuration** to set the parameters of the device.

Remote configuration in iVMS-4200 and Batch Configuration Tool is the same as that in Web. Here takes the configuration in web for example.

iNote

Run the browser, click $\square \rightarrow$ Internet Options \rightarrow Security to disable the Protected Mode.

6.4.1 Local Parameters Settings

You can configure the parameters of the live view, record files and captured pictures. The record files and captured pictures are the ones you record and capture by using the web browser. You can also set and view the saving paths of the captured pictures and recorded videos on the PC that running the web browser.

Live View Parameters			
Stream Type	 Main Stream 	○ Sub-stream	
Play Performance	• Shortest Delay	 Balanced 	⊖ Fluent
Auto Start Live View	⊖ Yes	No	
Image Format	JPEG	○ ВМР	
Record File Settings			
Record File Size	● 256M	○ 512M	○ 1G
Save record files to	undefined		Den Open
Picture and Clip Settings			
Save snapshots in live view to	undefined		Den Open
	Save		

Figure 6-4 Local Parameters

Live View Parameters

Stream Type

Set the stream type as Main Stream or Sub-stream.

Play Performance

Set the live view performance to Shortest Delay, Balanced or Fluent.

Auto Start Live View

Check Yes to enable the function.

Image Format

Select the image format for picture capture.

Click **Save** to enable the settings.

Record File Parameters

Record File Size

Select the packed size of the manually recorded and downloaded video files to **256M**, **512M** or **1G**. After the selection, the maximum record file size is the value you selected.

Save record files to

Set the saving path for the manually recorded video files.

Click Save to enable the settings.

Picture and Clip Settings

Save snapshots in live view to

Set the saving path of the manually captured pictures in live view mode.

iNote

You can click **Browse** to change the directory for saving the clips and pictures, and click **Open** to open the set folder of clips and picture saving.

Click **Save** to enable the settings.

6.4.2 System Settings

Follow the instructions below to configure the system settings, include System Settings, Maintenance, Security, and User Management, etc.

Click **System** to enter the settings page.

Basic Information

Click **System Settings** → **Basic Information** to enter the settings page. On the page, you can edit **Device Name** and **Device No.** Set the **Language** according to your needs. You can view the quantities of added users and cards in **Capacity**. Click **Save** to enable the settings.

Time Settings

Click System Settings \rightarrow Time Settings to enter the settings page. Select the Time Zone of your location from the drop-down list.

• Enable NTP, set the Server Address, NTP Port and Interval.

• Enable Manual Time Sync., set the time manually or check the Sync. with computer time.

Click Save to enable the settings.

DST

Click System Settings \rightarrow DST to check Enable DST. Set the parameters according to your needs and click Save to enable the settings.

About

Click System Settings → About and click Open Source Software Licenses to view the details.

Maintenance

Click Maintenance → Upgrade & Maintenance to enter the settings page.

Reboot		
	Reboot R	eboot the device.
Restore Parameters		
	Default R	eset all the parameters, except the IP parameters and user information, to the default settings.
	Restore All R	estore all parameters to default settings.
	Unlink APP Accourt	nt Unlink from Hik-connect account.
Export		
Device Parameters	Export	
Import Config File		
Device Parameters		Import
Upgrade		
Controller 🔽		Upgrade
		and the factor of the device of the factor of the device o

Figure 6-5 Maintenance

- Reboot: Click Reboot to reboot the device.
- Default

Click **Default** to reset all the parameters, except the IP parameters and user information, to the default settings.

Restore All

Click Restore All to restore all parameters to default settings.

- Export parameters:
 - 1. Select **Device Parameters**, and click **Export** to pop up the dialog box.
 - 2. Set and confirm the encryption password.
 - 3. Click **OK** to export parameters.
- Import Config. File:
 - 1. Click browse icon to select the configuration file.
 - 2. Click **Import** and enter the encryption password to import.
- Upgrade: Click browse icon to select the upgrade file.

iNote

The upgrading process will last 1 to 10 minutes, do not power off during the upgrading. The device reboots automatically after upgrading.

Security Service

Click **Security** \rightarrow **Security Service** to enter the settings page. On the page, you can enable SSH according to your actual needs.

Click Save to enable the settings.

User Management

Click **User Management** to enter the settings page. Administrator can edit the permission for the users.

iNote

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Online Users

Click **User Management** \rightarrow **Online Users** to enter the page. Click **Refresh** to get the present information.

Arming/Disarming Information

Click **User Management** → **Arming/Disarming Information** to view the information. Click **Refresh** to get the present information.

6.4.3 Network Settings

TCP/IP Settings

TCP/IP settings must be properly configured before you operate the device over network. The device supports IPv4.

Steps

1. Click **Network** → **Basic Settings** → **TCP/IP** to enter the settings page.

	DHCP	
IPv4 Address	192.0.0.65	
IPv4 Subnet Mask	255.255.255.0	
IPv4 Default Gateway	192.0.0.1	
Mac Address	00-40-0	
mac / taal cos	00:40:3e:5a:f2:8c	

DNS Server

Preferred DNS Server	8.8.8.8
Alternate DNS Server	8.8.4.4



Figure 6-6 TCP/IP Settings

2. Configure the network parameters.

- Check **DHCP**, the device will get the parameters automatically.
- Set the IPv4 Address, IPv4 Subnet Mask and IPv4 Default Gateway manually.
- **3.** Configure the corresponding DNS server parameters.
- 4. Click Save to enable the settings.

Port Settings

Steps

1. Click **Network** \rightarrow **Basic Settings** \rightarrow **Port** to enter the settings page.

HTTP Port	80
RTSP Port	554
HTTPS Port	443
Server Port	8000



Figure 6-7 Port Settings

2. Set the ports of the device.

HTTP Port

The default port number is 80, and it can be changed to any port No. which is not occupied.

HTTPS Port

The default port number is 443, and it can be changed to any port No. which is not occupied.

RTSP Port

The default port number is 554.

Server Port

The default server port number is 8000, and it can be changed to any port No. ranges from 2000 to 65535.

3. Click Save to enable the settings.

Wi-Fi Settings

The device support connecting to wireless network.

Steps

1. Click Network → Basic Settings → Wi-Fi to enter the settings page.

Ni-Fi		
Wi-Fi 🔽		
$+$ Add \square Refresh		
Wi-Fi Name		Operation
	ିଆ	S
	ি	S
	a	S
	a	S
	(a	S
	a	S
	ିଲ	S
	<u></u>	S
	ିଲ	S
/LAN		
Network Settings		

Figure 6-8 Wi-Fi Settings

- **2.** Select a Wi-Fi and click $\overline{\otimes}$ to pop-up the dialog box.
- **3.** Enter the password of the wireless network to connect.
- 4. Optional: Click Network Settings to set the parameters of WLAN.

SIP Setting

Steps

1. Click **Network** → **Basic Settings** → **SIP** to enter the settings page.

Enable VOIP Gateway		
Register User Name]
Registration Password]
Server Address]
Server Port	5060	
Expiry Time	60	minute(s)
Register Status	Not Registered	1
Number		
Display User Name		
_		
	Save	

Figure 6-9 SIP Settings

- 2. Check Enable VOIP Gateway.
- **3.** Configure the SIP parameters.
- 4. Click Save to enable the settings.

FTP Settings

Steps

1. Click **Network** \rightarrow **Advanced** \rightarrow **FTP** to enter the settings page.

✓ Enable FTP

Server Type	Server IP Address	~
Server IP Address	0.0.0.0	
Port	21	
Enable Anonymous		
User Name		
Password		
Directory Structure	Save in the child directory	~
Parent Directory	Building No. & Unit No.	\checkmark
Child Directory	Time	~

Picture Naming Rules

Delimiter	_	
Named Item	Option1	\checkmark
Named Element	Time	\checkmark



Figure 6-10 FTP Settings

- 2. Check Enable FTP.
- 3. Select Server Type.
- 4. Input the Server IP Address and Port.
- 5. Configure the FTP Settings, and the user name and password are required for the server login.
- 6. Set the Directory Structure, Parent Directory and Child Directory.
- 7. Set the picture naming rules.
- 8. Click Save to enable the settings.

Platform Access

Platform access provides you an option to manage the devices via platform.

Steps

- 1. Click Network → Advanced Settings → Platform Access to enter the settings page.
- 2. Check the checkbox of Enable to enable the function.
- 3. Select the Platform Access Mode.

iNote

Hik-Connect is an application for mobile devices. With the App, you can view live image of the device, receive alarm notification and so on.

4. Create a Stream Encryption/Encryption for the device.

iNote

6 to 12 letters (a to z, A to Z) or numbers (0 to 9), case sensitive. You are recommended to use a combination of no less than 8 letters or numbers.

5. Click Save to enable the settings.

6.4.4 Video & Audio Settings

Video Parameters

Steps

1. Click **Video/Audio** \rightarrow **Video** to enter the settings page.

Stream Type	Main Stream	
Video Type	Video&Audio	
Resolution	1280*720P	
Bitrate Type	Variable	
Video Quality	Medium	
Frame Rate	25 🗸	fps
Max. Bitrate	2048	Kbps
Video Encoding	H.264	
I Frame Interval	50]

Figure 6-11 Video Parameters

Save

- 2. Select the Stream Type.
- **3.** Configure the video parameters.

Stream Type

Select the stream type to main stream or sub stream.

Video Type

Select the stream type to video stream, or video & audio composite stream. The audio signal will be recorded only when the **Video Type** is **Video & Audio**.

Resolution

Select the resolution of the video output.

Bitrate Type

Select the bitrate type to constant or variable.

Video Quality

When bitrate type is selected as Variable, 6 levels of video quality are selectable.

Frame Rate

Set the frame rate. The frame rate is to describe the frequency at which the video stream is updated and it is measured by frames per second (fps). A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

Max. Bitrate

Set the max. bitrate from 32 to 16384 Kbps. The higher value corresponds to the higher video quality, but the better bandwidth is required.

Video Encoding

The device supports H.264.

I Frame Interval

Set I Frame Interval from 1 to 400.

4. Click Save to save the settings.

Audio Parameters

Steps

1. Click Video/Audio → Audio to enter the settings page.

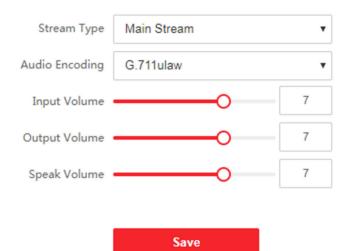


Figure 6-12 Audio Settings

2. Configure the stream type and the audio encoding type.

Stream Type

Select the stream type to main stream or sub stream.

Audio Encoding

The device support G.711ulaw and G.711 alaw.

3. Adjust the Input Volume, Output Volume and Speak Volume.

iNote

Available range of volume: 0 to 10.

4. Click Save to save the settings.

6.4.5 Image Settings

Display Settings

Configure the image adjustment, backlight settings and other parameters in display settings.

Steps

1. Click Image → Display Settings to enter the display settings page.

Video Standard	PAL(50HZ)	\checkmark			
WDR	Disable	\checkmark			
Basic Parameter			Image Adju Day/Night S Backlight	Brightness O Contrast O Saturation O Sharpness O	Default 50 50 50 50 50 50

Figure 6-13 Display Settings

2. Select the Format.

3. Set the display parameters.

WDR

Wide Dynamic Range can be used when there is a high contrast of the bright area and the dark area of the scene.

Brightness

Brightness describes bright of the image, which ranges from 1 to 100.

Contrast

Contrast describes the contrast of the image, which ranges from 1 to 100.

Saturation

Saturation describes the colorfulness of the image color, which ranges from 1 to 100.

Sharpness

Sharpness describes the edge contrast of the image, which ranges from 1 to 100.

Set the Day/Night Mode.

			Default
Image Adjus	D 011110 111		
intage Aujus	Day/Night Switch	Auto	\checkmark
Day/Night	Sensitivity	4	\checkmark
Backlight			

Figure 6-14 Day/Night Mode

- Set Day Mode or Night Mode manually.
- Set the mode as **Auto** and edit the sensitivity according to your needs.
- Set the mode as **Scheduled-Switch**. Set the start time and end time.

iNote

Daytime is from configured start time to configured time. The rest of the time is set as night by default.

5. Set the backlight parameters.

			Default
Image Adjus		Enable BLC	
Day/Night S	BLC Area	Disable	\checkmark
Backlight			

Figure 6-15 Backlight

- 1) Check the checkbox to enable BLC.
- 2) Select BLC Area.
- 6. Click Save to enable the settings.

OSD Settings

You can customize the camera name, time/date format, display mode, and OSD size displayed on the live view.

Steps

- **1.** Click Image \rightarrow OSD Settings to enter the settings page.
- 2. Check the corresponding checkbox to select the display of camera name, date or week if required.
- 3. Edit the Camera Name.
- **4.** Select from the drop-down list to set the **Time Format** and **Date Format**.
- 5. Adjust the OSD position.
- 6. Click Save to enable the settings.

Target Cropping

Steps

- **1.** Click **Image** \rightarrow **Crop** to enter the page.
- 2. Check Enable Target Cropping to enable the function.
- 3. Click 👩 to capture photo.
- 4. Click 🖿 to start recording.

- 5. Select Cropping Resolution.
- 6. Click Save.

iNote

- You can select Cropping Resolution as 704*576, 1280*720, or 1920*1080.
- You can zoom in or zoom out the image by selecting **Cropping Resolution** after clicking **Save**.

6.4.6 Event Settings

Motion Detection

Motion detection detects the moving objects in the configured security area, and a series of actions can be taken when the alarm is triggered.

Steps

1. Click **Event** \rightarrow **Motion** to enter the settings page.

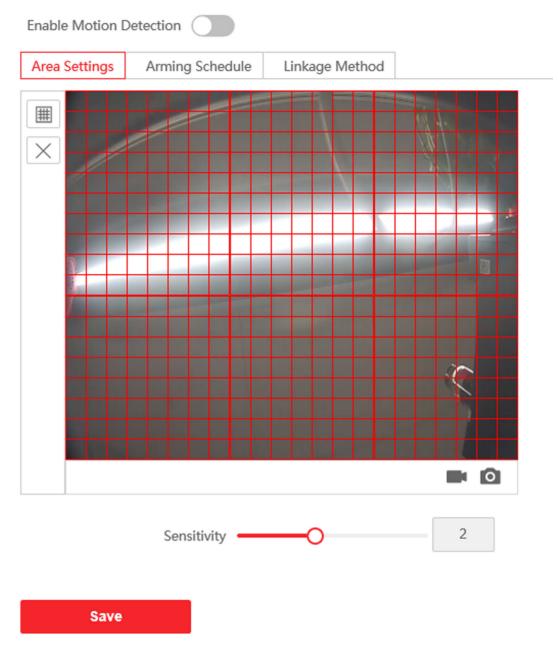


Figure 6-16 Motion Detection

- 2. Slide Enable Motion Detection to enable the function.
- **3.** Click **Draw Area**. Click and drag the mouse on the live video to draw a motion detection area. Click **Save** to save the settings.
 - **Clear Area** Click **X** to clear all of the areas.

Adjust Sensitivity Move the slider to set the sensitivity of the detection.

4. Click Arming Schedule to edit the arming schedule.

5. Click on the time bar and drag the mouse to select the time period. Click **Save** to save the settings.

Delete Schedule Click **Delete** to delete the current arming schedule.

6. Click Linkage Method to enable the linkages.

Notify Security Center

Send an exception or alarm signal to the remote management software when an event occurs.

7. Click Save to enable the settings.

Event Linkage

Steps

1. Click **Event** \rightarrow **Basic Event** \rightarrow **Event Linkage** to enter the settings page.

Major Type	Door Event	1
Minor Type	Door Open Timed Out (Door Cont	/
	Vormal Linkage	
	Votify Surveillance Center	
	Save	

Figure 6-17 Event Linkage

- 2. Select the Major Type as Device Event or Door Event.
- 3. Select the type of the Normal Linkage for the event.
- 4. Click Save to enable the settings.

6.4.7 Schedule Settings

You can create call schedule, or else the device will call indoor station all day by default.

Steps

- 1. Click Schedule → Video Intercom → Call Schedule .
- 2. Click the next row below Enable Indoor Station All Day by Default.
- 3. Enter Schedule Name.
- 4. Select Call Type.
- 5. Set Weekly Schedule.
 - 1) Click Weekly Schedule.

Schedule Name	TemplatePlan1
Call Type	Indoor Station
Time Settings	Weekly Schedule Holiday Schedule
	X Delete 🛱 Delete All
	0 2 4 6 8 10 12 14 16 18 20 22 24 Mond
	0 2 4 6 8 10 12 14 16 18 20 22 24 Tuesd
	0 2 4 6 8 10 12 14 16 18 20 22 24 Wedn
	0 2 4 6 8 10 12 14 16 18 20 22 24 Thurs
	0 2 4 6 8 10 12 14 16 18 20 22 24 Friday
	0 2 4 6 8 10 12 14 16 18 20 22 24 Satur
	0 2 4 6 8 10 12 14 16 18 20 22 24 Sunday

Figure 6-18 Weekly Schedule

- 2) Drag mouse to set the schedule according to the actual needs.
- 3) **Optional:** Click the copy icon to copy the schedule to other days according to the actual needs.
- 4) Click Save.
- 6. Set Holiday Schedule.
 - 1) Click Holiday Schedule.

Operation

Figure 6-19 Holiday Schedule

- 2) Click Add.
- 3) Set Start Time and End Time.
- 4) Select Call Type.
- 5) Drag mouse to set the schedule according to the actual needs.
- 6) Click **OK**.
- 7) You can edit or delete the schedule according to the actual needs.
- 8) Click Save.

iNote

The holiday schedule have higher priority than weekly schedule when you set the two schedule at the same time.

6.4.8 Intercom Settings

Device No. Configuration

Set the No. of the device, and linked devices can build a communication.

Steps

1. Click Intercom \rightarrow Device No. to enter the settings page.

Device Type	Door Station	*
Floor No.	1	~
Door Station No.	0	
Advanced Settings		~ ^
Community No.	1	
Building No.	1	
Unit No.	1	
	Save	

Figure 6-20 Device No. Settings

- 2. Select the device type from the drop-down list, and set the corresponding information.
- 3. Click Save to enable the device number configuration.

iNote

- For main door station (D series or V series), the serial No. is 0.
- For sub door station (D series or V series), the serial No. cannot be 0. Serial No. ranges from 1 to 99.
- For each villa or building, at least one main door station (D series or V series) should be configured, and one sub door stations (D series or V series) can be customized.
- For one main door station (D series or V series), up to 8 sub door stations can be configured.

Linked Network Settings

Steps

- **1.** Go to Intercom \rightarrow Session Settings to enter the settings page.
- 2. Set Register Number and Registration Password.
- 3. Set Main Station IP and VideoIntercom Server IP.
- 4. Enable Protocol 1.0.
- 5. Click Save to enable the settings.

Time Parameters

Go to Intercom → Time Parameters to enter the page. Configure Max. Call Duration, Max. Message Duration, Max. Ring Duration, and click Save.

iNote

- Max. call duration between the module indoor station and client ranges from 90 s to 120 s. The call will end automatically when the actual calling duration is longer than the configured one.
- Max. message duration ranges from 30 s to 60 s. The message will end automatically when the actual message duration is longer than the configured one.
- Max. ring duration refers to the maximum duration of the module indoor station when it is called without being accepted. Max. ring duration ranges from 65 s to 255 s.

Ring-Back Tone Settings

Click Intercom → Ringbacktone Settings to enter the settings page.

Click Add to select the ring tone from PC.

iNote

Available Audio Format: WAV、 AAC, Size: Less than 600 KB, Sample Rate: 8000Hz, Mono.

Press Button to Call

Steps

1. Go to **Intercom** \rightarrow **Press Button to Call** to enter the settings page.



Figure 6-21 Press Button to Call

2. Edit room No. in the button settings and select Link Time Schedule.

iNote

- The number of buttons may vary with different models. Please refer to the actual product.
- The schedule settings refers to <u>Schedule Settings</u> for details.
- 3. Click Save to enable the settings.

I/O Settings

Steps

- **1.** Click Intercom \rightarrow I/O Settings to enter the I/O input and output settings page.
- 2. Select I/O input No., input mode, output No., and output mode.
- 3. Click Save to enable the settings.

i Note

- For door station, there are 4 I/O input terminals. By default, Terminal 1 and 2 correspond to Door Status. Terminal 3 and 4 correspond to interfaces of Door Switch.
- For door station, there are 2 I/O Output Terminals. Terminal 1 and 2 correspond to Door interfaces (NO1/COM/NC1; NO2/COM/NC2) of door station. Door 1 is enabled by default. You can enable/disable IO Out according to needs.

Operation

Number Settings

Link the room No. and SIP numbers.

Click Number Settings to enter the page.

+ Add Delete
No. Room No. SIP Number

Figure 6-22 Number Settings

Click Add, set the Room No. and SIP numbers in the pop-up dialog box.

6.4.9 Access Control Settings

Door Parameters

Set the parameters of the door which is linked to the device.

Steps

1. Click Access Control → Door Parameters to enter the settings page.

Door No.	Door1		~	
Name	Door1			
Open Duration	2			s
Relay reverse	O ON	💿 Disable		
		Save		

Figure 6-23 Door Parameters

- 2. Select Door No., and edit the Name.
- **3.** Set **Open Duration**. When the time to open over the open duration you set, the door will be locked again.
- 4. Select Relay Reverse as ON or Disable.
- 5. Click Save to enable the settings.

Card Security

Click Access Control \rightarrow Card Security to enter the settings page.

Slide to enable card encryption parameters. Click **Save** to enable the settings.

Elevator Control

Before You Start

- Make sure your door station is in the mode of main door station. Only the main door station support elevator control function.
- Make sure your door station has been connected to the elevator controller via RS-485 wire if you want to use RS-485 interface.

Steps

1. Click Access Control → Elevator Control to enter the corresponding configuration pag	ge.
---	-----

Enable elevator control		
Elevator No.	Elevator No.1	~
Elevator Controller Type		\checkmark
Interface Type	Network Interface	\checkmark
Negative Floor Capacity	0	
Alarm Receiver Type	IP	\checkmark
Server IP Address		
Port	0	
User Name		
Password		
	Save	

Figure 6-24 Elevator Control

- 2. Check to enable elevator control function.
- **3.** Select an Elevator No., and select an elevator controller type for the elevator.
- 4. Set the Negative Floor.
- 5. Select the Interface Type as RS-485 or Network Interface. And enable the elevator control.
 - If you select RS-485, make sure you have connected the door station to the elevator controller with RS-485 wire.
 - If you select Network interface, enter the elevator controller's IP address, port No., user name, and password.
- 6. Click Save to enable the settings.

iNote

- Up to 4 elevator controllers can be connected to one door station.
- Up to 10 negative floors can be added.
- Make sure the interface types of elevator controllers, which are connected to the same door station are consistent.

Chapter 7 Configuration via Client Software

7.1 Device Management

Device management includes device activation, adding device, editing device, and deleting device, and so on.

After running the iVMS-4200, video intercom devices should be added to the client software for remote configuration and management.

7.1.1 Add Online Device

Before You Start

Make sure the device to be added is in the same subnet with your computer. Otherwise, please edit network parameters first.

Steps

- 1. Click Online Device to select an active online device.
- 2. Click Add.
- **3.** Enter corresponding information, and click **Add**.

Add				×
Adding Mode	IP/Domain	🔿 IP Segm	ent 🔿 (Cloud P2P
	⊖ EHome		0 1	Batch Import
Add Offline Device				
* Name				
* Address				
* Port				
* User Name	admin			
* Password	•••••			
Synchronize Time				
Import to Group				
	Set the device channels conr	e name as the gro nected to the devi	up name and a ce to the grou	add all the p.
	Add and New	Add	Cancel	

Figure 7-1 Add to the Client

7.1.2 Add Device by IP Address

Steps

- 1. Click +Add to pop up the adding devices dialog box.
- 2. Select IP/Domain as Adding Mode.
- 3. Enter corresponding information.
- 4. Click Add.

7.1.3 Add Device by IP Segment

You can add many devices at once whose IP addresses are among the IP segment.

Steps

- 1. Click +Add to pop up the dialog box.
- 2. Select IP Segment as Adding Mode.
- **3.** Enter corresponding information, and click **Add**.

7.2 Live View via Door Station

Steps

- 1. On the main page of the client software, click Main View to enter the Live View page.
- 2. In the left list of the window, double-click the device IP or click the play icon to live view.
- **3. Optional:** On the Live View page, control-click and select **Capture** to get the picture of the live view.

7.3 Organization Management

On the main page of the Client Software, click **PersonalManagement** to enter the configuration page.

7.3.1 Add Organization

Steps

- 1. In the organization list on the left, click +Add.
- 2. Enter the Organization Name as desired.
- 3. Click OK to save the adding.
- **4. Optional:** You can add multiple levels of organizations according to the actual needs.
 - 1) You can add multiple levels of organizations according to the actual needs.
 - 2) Then the added organization will be the sub-organization of the upper-level organization.

iNote

Up to 10 levels of organizations can be created.

7.3.2 Modify and Delete Organization

You can select the added organization and click 🔟 to modify its name.

You can select an organization, and click X button to delete it.

i Note

- The lower-level organizations will be deleted as well if you delete an organization.
- Make sure there is no person added under the organization, or the organization cannot be deleted.

7.4 Person Management

After adding the organization, you can add person to the organization and manage the added person such as issuing cards in batch, importing and exporting person's information in batch, etc.

iNote

- Up to 2,000 persons can be added.
- Up to 5 cards can be added to each person.

7.4.1 Add Person

Person information is necessary for the video intercom system. And when you set linked device for the person, the intercom between intercom devices can be realized.

Steps

1. Select an organization in the organization list and click **Add** on the Person panel to pop up the adding person dialog.

iNote

The Person No. will be generated automatically and is editable.

- 2. Set basic person information.
 - 1) Enter basic information: name, tel, birthday details, effective period and email address.

i Note

The length of person name should be less than 15 characters.

2) Click Add face to upload the photo.

i Note

The picture should be in *.jpg format.

Click Upload	Select the person picture from the local PC to upload it to the client.

Click Take Phone Take the person's photo with the PC camera.

Click Remote Collection Take the person's photo with the collection device.

- 3. Issue the card for the person.
 - 1) Click Credential \rightarrow Card .
 - 2) Click + to pop up the Add Card dialog.
 - 3) Select Normal Card as Card Type.
 - 4) Enter the Card No.
 - 5) Click **Read** and the card(s) will be issued to the person.
- 4. Link the device to the person.
 - 1) Set the linked devices.

Linked Device

You can bind the indoor station to the person.

iNote

If you select **Analog Indoor Station** in the Linked Device, the **Door Station** field will display and you are required to select the door station to communicate with the analog indoor station.

Room No.

You can enter the room No. of the person.

- 2) Click **OK** to save the settings.
- 5. Click Add to save the settings.

7.4.2 Modify and Delete Person

Select the person and click Edit to open the editing person dialog.

To delete the person, select a person and click **Delete** to delete it.

i Note

If a card is issued to the current person, the linkage will be invalid after the person is deleted.

7.4.3 Change Person to Other Organization

You can move the person to another organization if needed.

Steps

- 1. Select the person in the list and click Change Organization.
- 2. Select the organization to move the person to.
- 3. Click OK to save the settings.

7.4.4 Import and Export Person Information

The person information can be imported and exported in batch.

Steps

- **1.** Exporting Person: You can export the added persons' information in Excel format to the local PC.
 - 1) After adding the person, you can click **Export Person** to pop up the following dialog.
 - 2) Click ... to select the path of saving the exported Excel file.
 - 3) Check the checkboxes to select the person information to export.
 - 4) Click **OK** to start exporting.
- **2.** Importing Person: You can import the Excel file with persons information in batch from the local PC.
 - 1) Click Import Person.
 - 2) You can click Download Template for Importing Person to download the template first.
 - 3) Input the person information to the downloaded template.
 - 4) Click ... to select the Excel file with person information.
 - 5) Click **OK** to start importing.

7.4.5 Get Person Information from Device

If the added device has been configured with person information (including person details, fingerprint, issued card information), you can get the person information from the device and import to the client for further operation.

Steps

i Note

This function is only supported by the device the connection mothod of which is TCP/IP when adding the device.

- **1.** In the organization list on the left, click to select an organization to import the persons.
- 2. Click Get from Device to pop up the dialog box.
- **3.** The added device will be displayed.
- **4.** Click to select the device and then click **Get** to start getting the person information from the device.

iNote

- The person information, including person details, person's fingerprint information (if configured), and the linked card (if configured), will be imported to the selected organization.
- If the person name stored in the device is empty, the person name will be filled with the issued card No. after importing to the client.

7.4.6 Issue Card in Batch

You can issue multiple cards for the person with no card issued in batch.

Steps

1. Click **Batch Issue Cards** to enter the dialog page. All the added person with no card issued will display in the Person(s) with No Card Issued list.

ls	sue Card in Ba	tch				×
	Issued: 0/1				5 Initialize	Settings
	Name	Person ID	State	Card No		
	nam	1	No Card Iss			

Figure 7-2 Issue Card in Batch

2. Click Settings.

Settings				×
Mode	Local	0	Remote	
Card Enrollment Station	DS_K1F100	D_D8E	-	
Card Type	Mifare Ca	rd	-	
Buzzing				
Card No. Type	RS-485/W	iegand 34	-	
M1 Card Encryption				
	_			
		ОК	Cancel	

Figure 7-3 Card Settings

- 3. Select Card Type and Card No. Type.
- **4.** Click **OK** to save the settings.

Result

After issuing the card to the person, the person and card information will display in the Person(s) with Card Issued list.

7.5 Video Intercom Settings

The Video Intercom Management module provides the function of video intercom, checking call logs and managing notice via the iVMS-4200 Client Software.

iNote

For the user with access control module permissions, the user can enter the Access Control module and manage video intercom and search information.

You should add the device to the software and configure the person to link the device in Access Control module before your configuration remotely.

On the main page, click \blacksquare **Constrained AccessControlInfo** \rightarrow Video Intercom \rightarrow Video Intercom on the left bar to enter the Video Intercom page.

7.5.1 Receive Call from Door Station

Steps

- **1.** Select the client software in the page to start calling the client and an incoming call dialog will pop up in the client software.
- 2. Click Answer to answer the call. Or click Hang Up to decline the call.
- **3.** After you answer the call, you will enter the In Call page.

Adjust the Volume of Loudspeaker	Click 🛐 to adjust the volume of loudspeaker.
Hang Up	Click Hang Up to hang up.
Adjust the Volume of Microphone	Click 🛃 to adjust the volume of microphone.
Unlock Remotely	For door station, you can click 💽 to open the door remotely.

iNote

- One video intercom device can only connect with one client software.
- The maximum ring duration can be set from 15s to 60s via the Remote Configuration of the video intercom device.
- The maximum speaking duration between indoor station and iVMS-4200 can be set from 120s to 600s via the Remote Configuration of indoor station.
- The maximum speaking duration between door station and iVMS-4200 can be set from 90s to 120s via the Remote Configuration of door station.

7.5.2 Release Notice

You can create different types of notices and send them to the residents. Four notice types are available, including Advertising, Property, Alarm and Notice Information.

Before You Start

Make sure the person has been added to the client.

Steps

- 1. On the video intercom settings page, click Notice to enter the page.
- 2. Click +Add to pop up the adding dialog box.
- 3. Select the person according to your needs.
- 4. Edit the Subject, Type and Information.
- 5. Click View to select the picture.
- 6. Click Send.

iNote

- Up to 63 characters are allowed in the Subject field.
- Up to 6 pictures in the JPGE format can be added to one notice. And the maximum size of one picture is 512KB.
- Up to 1023 characters are allowed in the Information field.

7.5.3 Search Video Intercom Information

Search Call Logs

Steps

1. On the Video Intercom page, click **Call Log** to enter the page.

	all Status	All		Device Type	All Devices				Reset
	Time	2019.07.16 00:00:00-2019	.07.16 23:59:59 🛗						Search
🗅 Export									
Call Status	Start Tim	ie	Time Length	Device Type	Device Name	Organiz	ation	Opera	ition
				No data					
total 0 record(s)	30						> >		/ 0 Page

Figure 7-4 Search Call Logs

2. Set the search conditions, including call status, device type, start time and end time.

Call Status

Click \vee to unfold the drop-down list and select the call status as **Dialed**, **Received** or **Missed**. Or select **All** to search logs with all statuses.

Device Type

Click V to unfold the drop-down list and select the device type as **Indoor Station**, **Door Station**, **Outer Door Station** or **Analog Indoor Station**. Or select **All Devices** to search logs with all device types.

Start Time/End Time

Click the time icon to specify the start time and end time of a time period to search the logs.

Reset the Settings Click **Reset** to reset all the configured search conditions.

- 3. Click Search and all the matched call logs will display on this page.
- **4. Optional:** Check the detailed information of searched call logs, such as call status, ring/speaking duration, device name, resident organization, etc.
- 5. Optional: Input keywords in the Search field to filter the desired log.
- 6. Optional: Click Export to export the call logs to your PC.

Search Notice

Steps

- 1. On the Video Intercom page, click Notice to enter the page.
- **2.** Set the search conditions, including notice type, start time and end time.

Туре

Select Advertising Information, Property Information, Alarm Information or Notice Information as Type according to your needs.

Start Time/End Time

Click the time icon to specify the start time and end time of a time period to search the logs.

Reset the Settings Click **Reset** to reset all the configured search conditiions.

- 3. Click Search and the matched notice will display on this page.
- 4. Optional: Click Export to export the notices to your PC.

7.5.4 Upload Armed Information

Steps

1. On the main page, click upper right $\blacksquare \rightarrow$ **Tool** \rightarrow **DeviceGuard** to enter the page.

2. Enable to arm or disarm the device.

iNote

- While device has been added to the client software, the device armed by default.
- When the device is armed, the alarm logs upload to the client software automatically.
- Click Alarm Application → Event Search to search the alarm logs.
- 3. Optional: Click Arm All or Disarm All to arm or disarm all the device.

Appendix A. Communication Matrix and Device Command

Communication Matrix

Scan the following QR code to get the device communication matrix. Note that the matrix contains all communication ports of Hikvision access control and video intercom devices.



Figure A-1 QR Code of Communication Matrix

Device Command

Scan the following QR code to get the device common serial port commands. Note that the command list contains all commonly used serial ports commands for all Hikvision access control and video intercom devices.



Figure A-2 Device Command

